



Ural Parts Book - Wheel with Disk Brake

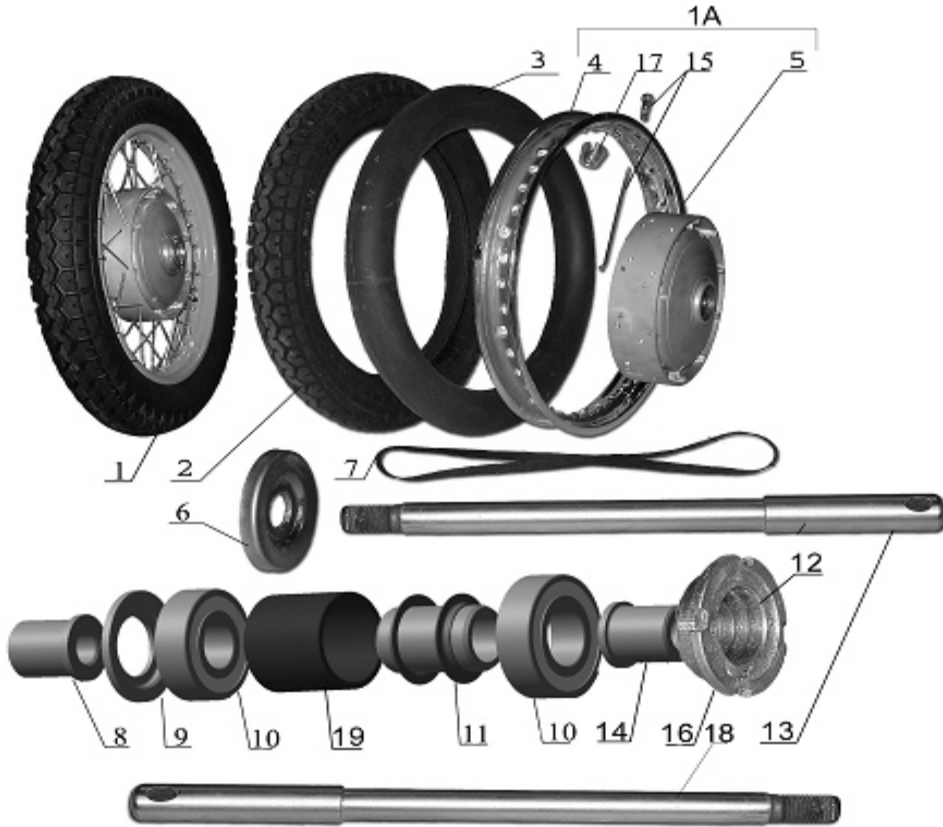

<b>Wheel 19"</b>			
<b>Item</b>	<b>Part #</b>	<b>Description</b>	<b>Qty</b>
1	IMZ-8.1037-07001-10	Wheel and tire 19" assy	1
2	IMZ-8.103-06126	Tire tube 4,00-19"	1
3	MC 06157	Tire tube 4,00-19"	1
4	IMZ-8.1037-07117	Wheel rim	1
5	IMZ-8.1037-07020-01	Hub and brake drum	1
6	62-20017-01	Hub protective cap	1
7	72-06123	Tire flap	1
8	62-06133	RH distance bushing	1
9	IMZ-8.1037-06109	Thrust washer	1
10	6204-2RSH/C3	Ball bearing	2
11	IMZ-8.1037-06018	Intermediate bushing and washer	1
12	IMZ-8.1037-06013	Nut assy	1
13	62-06127	Front wheel axle	1
14	62-06134	LH distance bushing	1
15	MC 06096	Spoke with Nipple	40
16	62-06165	Special nut	1
17	IMZ-8.121-06119	Balancing weight	*
18	63-07101-I	Rear wheel axle	1
19	IMZ-8.1037-06133	Distance bushing	1
1A	IMZ-8.1037-07002-10	Wheel with bearings assy	4

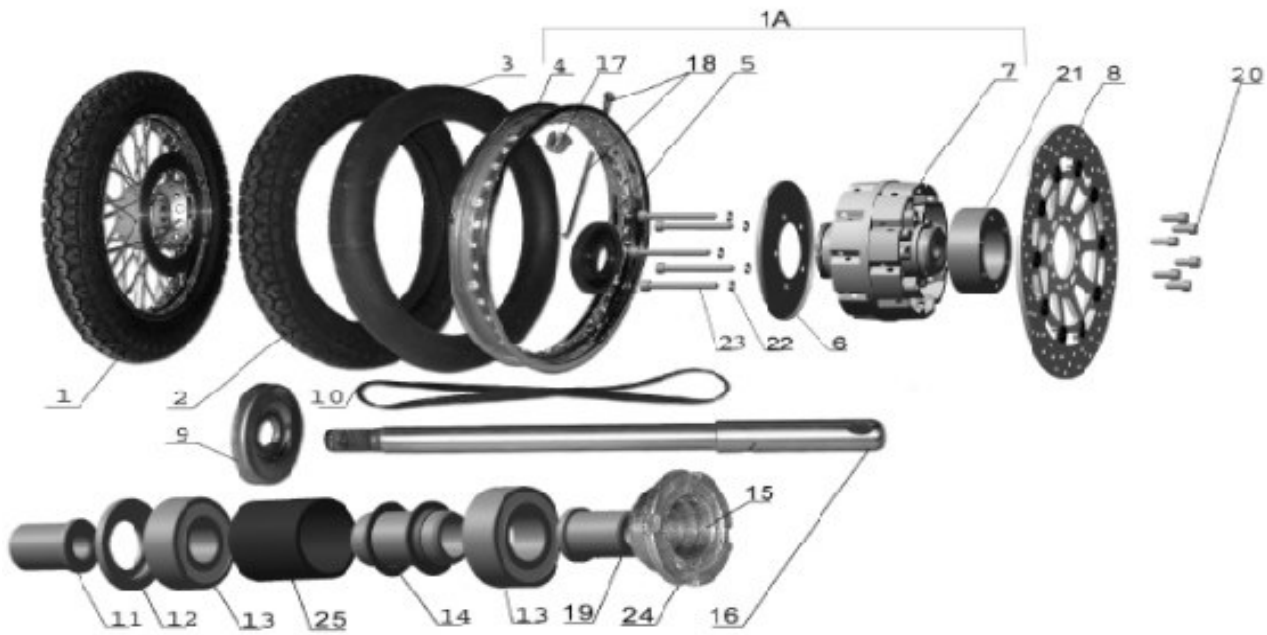

<b>Wheel with disk brake</b>			
<b>Item</b>	<b>Part #</b>	<b>Description</b>	<b>Qty</b>
1	IMZ-8.1037-06001-30	Wheel assy	1
2	IMZ-8.103-06126	Tire 4,00-19"	1
3	MC06157	Tire tube 4,00-19"	1
4	IMZ-8.1037-06117	Wheel rim	1
5	IMZ-8.1037-06160	Collar	1
6	IMZ-8.1037-06140	Protective cover	1
7	IMZ-8.1037-06020-10	Wheel hub	1
8	08.4899.72	Brake disc assy	1
9	62-20017-01	Wheel hub protective cap	1
10	72-06123	Tire flap	1
11	62-06133	Distance bushing	1
12	IMZ-8.1037-06109	Thrust washer	1
13	6204-2RSH/C3	Ball bearing	2
14	IMZ-8.1037-06018	Intermediate bushing and washer	1
15	IMZ-8.1037-06013	Wheel nut assy	1
16	62-06127	Front wheel axle	1
17	IMZ-8.121-06119	Balancing weight	*
18	MC 06097	Spoke with Nipple	40
19	62-06134	LH distance bushing	1
20	DIN 6912 M8x16	Screw M8x16	6
21	IMZ-8.1037-06132-10	Intermediate bushing	1
22	DIN 127 M8	Spring lock washer M8	5
23	DIN 6912 M8x70	Screw M8x70	5
24	6206165	Special nut	1
25	IMZ-8.1037-06133	Distance bushing	1
1A	IMZ-8.1037-06002-20	Wheel	1